



SoMove setup software



TCSWAAC13FB



VW3A8115

References

Description	Reference	Weight kg/ lb
SoMove setup software Includes: ☐ SoMove setup software for PC in English, French, German, Italian, Spanish and Chinese	SoMove software and the DTMs (Device Type Managers) associated with the devices can be downloaded from our website www.schneider-electric.com .	
USB/RJ45 cable ☐ Used to connect a PC to the device. ☐ This cable is 2.5 m/8.20 ft long and has a USB connector (PC end) and an RJ45 connector (device end).	TCSMCNAM3M002P	—
RJ45/RJ45 cable ☐ Used to connect a PC or an Ethernet router to the device. ☐ This cable is 2 m/6.56 ft long and has two type A RJ45 connectors (PC end and device end).	490NTW00002	—
Modbus/Uni-Telway-Bluetooth® adapter ☐ Used to enable any non-Bluetooth® device to communicate via Bluetooth® wireless link (1). Includes: ☐ 1 Bluetooth® adapter (range 20 m/65.62 ft, class 2) with an RJ45 connector ☐ For SoMove: 1 x 0.1 m/0.33 ft cordset with 2 RJ45 connectors	TCSWAAC13FB	0.032/ 0.071
USB-Bluetooth® adapter for PC ☐ Used to enable any non-Bluetooth® PC to communicate via Bluetooth® wireless link (2). ☐ It connects to a USB port on the PC. ☐ Range 10 m/32.81 ft, class 2	VW3A8115	0.214/ 0.472

(1) Available only for the following devices:

- Altivar 12, Altivar 312, Altivar 31, Altivar 61, Altivar 71 and Altivar Process drives
- Altistart 22 and Altistart 48 starters
- TeSys U starter-controllers
- TeSys T motor management system
- Lexium 32 servo drives

(2) Check the manufacturer's specification.

Compatibility of SoMove software with specific devices

Device	Range	Version of software on the device
Variable speed drive	Altivar 12, Altivar 312, Altivar 32	≥ 1.0
	Altivar 31	≥ 1.1
	Altivar 61, Altivar 71	≥ 1.6
	Altivar Process (ATV 6●●)	≥ 1.1
	Altivar Machine ATV320	≥ 2.4
Soft starter	Altistart 22	≥ 1.0
	Altistart 48	≥ 1.5
Starter-controller	TeSys U	≥ 1.0
Motor management system	TeSys T	≥ 1.0
Servo drive	Lexium 32	≥ 1.0
Integrated servo drive	Lexium 32i	≥ 1.0

Compatibility of SoMove software with systems and minimum required configuration

SoMove operates in the following PC environments and configurations:

- Compatibility:
 - Microsoft Windows® 7 Professional, 32 and 64 bit
 - Microsoft Windows® XP Professional SP3, 32 and 64 bit
 - Microsoft Windows® 8, 32 and 64 bit
 - Microsoft Windows® 8.1, 32 and 64 bit
- Minimum configuration:
 - 1 GHz Pentium® IV processor (or equivalent)
 - 1 GB available disk space
 - 1 GB of RAM